

Quick start guide – H6089

ESD PROTECTION


- Before proceeding, please ensure your workspace is protected from ESD (electrostatic discharge).
- Always store the product in a shielded bag when not in use.



The starter kit comes pre-assembled for your convenience and includes an SD card pre-loaded with a linux image. To get started with the default configuration, follow these steps:


1 Connect your preferred peripherals

Note that some interfaces on the carrier board may require additional configuration to work. Reference the image below for default compatibility and check the manual for more information.

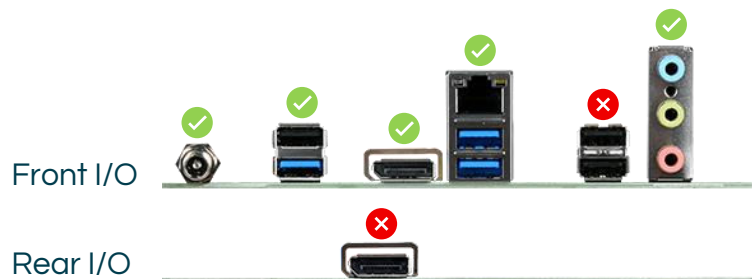

2 Connect the power adapter and press the PWR button (SW3)

The first time the device is powered on it may take several minutes to boot due to memory training. The memory training is conducted each time the CPU-module first powers up after a BIOS reset.

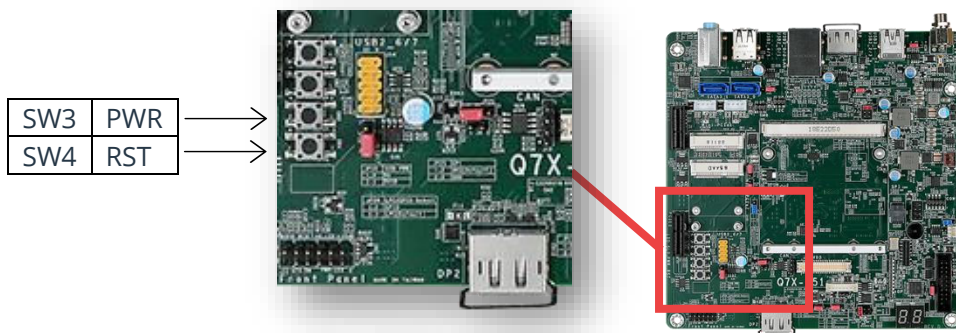

3 Login credentials for the included OS:

User: **root**
Password: **[no password]**

To enter the BIOS setup, press the **delete** button during boot.

Full documentation

Scan the QR code to access full documentation:



Need help?

Contact us: support@hectronic.se

